


OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

LIGHT AND WARMER SWITCH: Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH: Turns on the motor which drives the kettle agitator.

KETTLE HEAT SWITCH: Supplies power to the thermostat controlled kettle

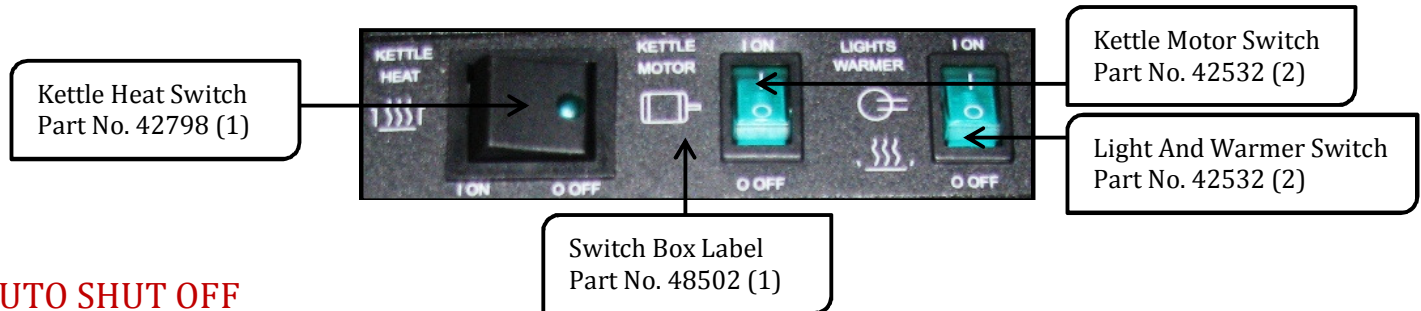

AUTO SHUT OFF

The 1866 and 2656 Models are equipped with an auto shut-off mechanism. If the kettle heat is on with no product popping for fifteen minutes, the auto shut-off will turn off the kettle heat element and the kettle heat switch will flash. To pop a new batch of corn, cycle the kettle heat switch off and then back on.

AMOUNT OF POPCORN AND OIL

Your new Popper is equipped with a 6 oz corn measuring cup (Part No. 49049).

Corn charge – 6 oz.

Oil charge – 1.6 to 2.0 oz.

Flavacol – 1 teaspoon

POPPING INSTRUCTIONS

1. Turn *Kettle Heat* and *Kettle Motor* switch on.
2. Make a test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load the kettle with corn and oil charge.
4. When corn has popped, dump the kettle.
5. Repeat cycle starting with step number 3 above; always pop 3-5 batches for best popcorn.

